



Tragbarer Kassettenplayer mit Bluetooth®

Bedienungsanleitung
Tchibo GmbH D-22290 Hamburg · 108754HB66XX · 2020-07



Sicherheitshinweise

Lesen Sie aufmerksam die Sicherheitshinweise und benutzen Sie den Artikel nur wie in dieser Anleitung beschrieben, damit es nicht versehentlich zu Verletzungen oder Schäden kommt. Bewahren Sie diese Anleitung zum späteren Nachlesen auf. Bei Weitergabe des Artikels ist auch diese Anleitung mitzugeben.

Verwendungszweck

Der Kassettenplayer ist zum Kassette hören über Kopfhörer oder via Bluetooth® in Verbindung mit einem Bluetooth®-Lautsprecher vorgesehen.

Der Kassettenplayer ist für den privaten Gebrauch konzipiert und für gewerbliche Zwecke ungeeignet.

Der Kassettenplayer kann über einen Netzadapter (nicht im Lieferumfang), mit Batterien oder mit Akkus in Betrieb genommen werden, wobei die Akkus nicht im Gerät geladen werden können.

GEFAHR für Kinder und Personen mit eingeschränkter Fähigkeit Geräte zu bedienen

- Halten Sie Kinder von Verpackungsmaterial, vom USB-Anschlusskabel und vom Ohrhörerkabel fern. Es besteht u.a. Erstickungs- und Strangulationsgefahr!
- Kinder erkennen nicht die Gefahren, die bei unsachgemäßem Umgang mit Elektrogeräten entstehen können. Halten Sie Kinder von dem Artikel fern.
- Halten Sie Kinder von Verpackungsmaterial fern. Es besteht u.a. Erstickungsgefahr!

GEFAHR durch Elektrizität bei Netzadapter-Betrieb

- Schließen Sie den Artikel nur in trockenen Innenräumen mit dem beiliegenden USB-Anschlusskabel und einem geeigneten Netzadapter an das Stromnetz an.
- Schließen Sie den Artikel nur an eine vorschriftsmäßig installierte Steckdose an, deren Netzspannung mit den technischen Daten des Netzadapters übereinstimmt.
- Tauchen Sie den Artikel nicht in Wasser oder andere Flüssigkeiten ein, da sonst die Gefahr eines elektrischen Schlages besteht. Schützen Sie ihn auch vor Tropf- und Spritzwasser.
- Stellen Sie keine mit Flüssigkeit gefüllten Gefäße, wie z.B. Vasen, auf oder in die nähere Umgebung des Gerätes. Das Gefäß kann umkippen und die Flüssigkeit kann die elektrische Sicherheit beeinträchtigen.
- Öffnen bzw. entfernen Sie auf keinen Fall Teile des Gehäuses. Im Inneren des Gehäuses befinden sich spannungsführende Teile, deren Berührung einen elektrischen Schlag verursachen kann. Stecken Sie auch keine Gegenstände in Geräteteilen. Sie könnten spannungsführende Teile berühren.

- Stellen Sie das Gerät nicht in geschlossene Schränke oder Regale ohne ausreichende Belüftung. Die Belüftung darf nicht dadurch beeinträchtigt werden, dass die Belüftungsschlitzte durch Zeitungen, Tischdecken, Gardinen etc. abgedeckt werden. Das Gerät muss einen Abstand von min. 5 cm zu allen Seiten haben.

WARNUNG vor Gehörschäden

- Hohe Lautstärke bei der Verwendung der beiliegenden Ohrhörer kann zum Verlust des Hörsinns führen. Bevor Sie die Ohrhörer aufsetzen, stellen Sie die Lautstärke leise! Das Gehör kann Schaden nehmen, wenn es zu lange oder zu plötzlich hohen Lautstärken ausgesetzt wird.

WARNUNG vor Verbrennungen/Brand

- Stellen Sie keine offenen Brandquellen wie z.B. brennende Kerzen in die Nähe des Artikels. Kerzen und andere offene Flammen müssen zu jeder Zeit vom Artikel ferngehalten werden, um die Ausbreitung von Feuer zu verhindern.

VORSICHT - Sachschäden

- Verwenden Sie das Gerät nicht in unmittelbarer Nähe von Magnetfeldern (z.B. von Fernsehgeräten oder anderen Lautsprechern) auf. Ziehen Sie dabei immer am Netzadapter, nicht am Anschlusskabel.

- Die Steckdose muss gut zugänglich sein, damit Sie im Bedarfsfall den Netzadapter schnell ziehen können. Verlegen Sie das Anschlusskabel so, dass es nicht zur Stolperfalle wird.

- Das Anschlusskabel darf nicht geknickt oder gequetscht werden. Halten Sie das Anschlusskabel fern von heißen Oberflächen und scharfen Kanten.

- Nehmen Sie das Gerät nicht in Betrieb, wenn es sichtbare Schäden aufweist oder heruntergefallen ist.

- Nehmen Sie keine Veränderungen am Artikel vor. Lassen Sie Reparaturen am Gerät nur von einer Fachwerkstatt durchführen.

- Ziehen Sie den Netzadapter aus der Steckdose, ...
 - wenn während des Betriebs Störungen auftreten,
 - nach dem Gebrauch,
 - bei Gewitter und
 - bevor Sie das Gerät reinigen.
- Ziehen Sie dabei immer am Netzadapter, nicht am Anschlusskabel.
- Die Steckdose muss gut zugänglich sein, damit Sie im Bedarfsfall den Netzadapter schnell ziehen können. Verlegen Sie das Anschlusskabel so, dass es nicht zur Stolperfalle wird.
- Das Anschlusskabel darf nicht geknickt oder gequetscht werden. Halten Sie das Anschlusskabel fern von heißen Oberflächen und scharfen Kanten.
- Nehmen Sie das Gerät nicht in Betrieb, wenn es sichtbare Schäden aufweist oder heruntergefallen ist.
- Nehmen Sie keine Veränderungen am Artikel vor. Lassen Sie Reparaturen am Gerät nur von einer Fachwerkstatt durchführen.

Bei Batterie- und Akkubetrieb:

- Achtung! Batterien/Akkus können explodieren, ...
 - wenn sie falsch eingesetzt werden. Achten Sie deshalb beim Einsetzen unbedingt auf die Polarität (+/-).
 - wenn sie während des Gebrauchs, der Lagerung oder des Transports extrem hohen oder extrem niedrigen Temperaturen oder niedrigem Luftdruck in großer Höhe ausgesetzt werden. Verwenden Sie den Artikel nur unter moderaten klimatischen Bedingungen.
 - wenn Sie sie verändern und/oder deformieren/erhitzen/zerlegen.
 - wenn sie auseinandergeronnen, in Feuer geworfen oder kurzgeschlossen werden.
- Achtung! Es besteht Explosionsgefahr oder die Gefahr des Austretens brennbarer Flüssigkeiten oder Gase wenn ein falscher Batterietyp eingesetzt wird. Verwenden Sie nur denselben oder einen gleichwertigen Batterietyp (siehe „Technische Daten“).
- Sollte eine Batterie/ein Akku ausgelaufen sein, vermeiden Sie Kontakt mit Haut, Augen und Schleimhäuten. Spülen Sie ggf. die betroffenen Stellen mit Wasser und suchen Sie umgehend einen Arzt auf.
- Nicht wiederaufladbare Batterien dürfen nicht geladen werden. Sie können dabei explodieren.
- Schützen Sie den Artikel sowie Batterien/Akkus vor übermäßiger Wärme. Nehmen Sie die Batterien/Akkus aus dem Artikel heraus, wenn diese erschöpft sind oder Sie den Artikel länger nicht benutzen. So vermeiden Sie Schäden, die durch Auslaufen entstehen können.
- Die Steckdose muss gut zugänglich sein, damit Sie im Bedarfsfall den Netzadapter schnell ziehen können.

Weiterer Lieferumfang (ohne Abbildung):

- 2 Batterien

Inbetriebnahme

Sie können den Kassettenplayer über einen Netzadapter, mit Akkus oder mit Batterien betreiben.

Netzadapter-Betrieb

- GEFAHR - Lebensgefahr durch Stromschlag
 - Schließen Sie den Artikel nur an eine vorschriftsmäßig installierte Steckdose an, deren Netzspannung mit den technischen Daten des Netzadapters übereinstimmt.
 - Entfernen Sie alle Batterien/Akkus aus dem Artikel, wenn diese erschöpft sind oder Sie den Artikel länger nicht benutzen. So vermeiden Sie Schäden, die durch Auslaufen entstehen können.
 - Ersetzen Sie immer alte Batterien/Akkus. Mischen Sie keine alten und neuen Batterien/Akkus, verschiedene Batterie-/Akku-Typen, -Marken oder Batterien mit unterschiedlicher Kapazität.

Sie benötigen einen USB-Netzadapter (nicht im Lieferumfang) und das beiliegende USB-Anschlusskabel. Die erforderlichen technischen Daten entnehmen Sie dem Kapitel „Technische Daten“.

Sie benötigen 2 Batterien. Die erforderlichen technischen Daten entnehmen Sie dem Kapitel „Technische Daten“.

- Wird das Gerät von einem kalten an einen warmen Ort gebracht, kann Kondensfeuchtigkeit im Gerät entstehen. Lassen Sie das Gerät deshalb einige Stunden ausgeschaltet.

- Schützen Sie das Gerät vor Stößen, Stürzen, Staub, Feuchtigkeit, direkter Sonneneinstrahlung und extremen Temperaturen. Halten Sie auch ausreichend Abstand zu Wärmequellen, wie z.B. Herdplatten oder Öfen.

- Das USB-Anschlusskabel darf nicht geknickt oder gequetscht werden.
- Die Anschlussklemmen im Batteriefach dürfen nicht kurzgeschlossen werden.


- Verwenden Sie zum Reinigen keine scheuernden oder ätzenden Mittel bzw. harte Bürsten etc.
- Das beiliegende USB-Anschlusskabel dient nur zum Stromanschluss über einen USB-Netzadapter, nicht zur Datenübertragung.

WARNUNG -


- Verletzungsgefahr

- Versuchen Sie niemals, nicht wiederaufladbare Batterien zu laden.
- Im Batterie-Betrieb darf das Gerät nicht am Stromnetz angeschlossen sein. Es besteht Explosionsgefahr!

- Zum Einlegen der Batterien ziehen Sie ggf. den USB-Netzadapter aus der Steckdose.

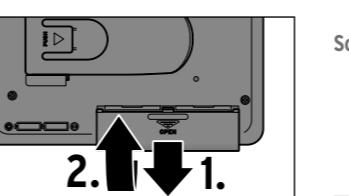

1. Schieben Sie den Batteriefachdeckel ein wenig nach unten und klappen ihn dann hoch.

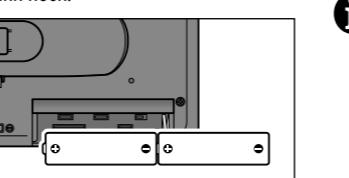

2. Legen Sie die beiden Batterien wie im Batteriefach abgebildet ein. Beachten Sie die korrekte Polarität (+/-).

3. Schließen Sie den Batteriefachdeckel.

- Batterielaufzeit bei mittlerer Lautstärkeinstellung: ca. 6,5 Stunden.

Ohrhörer anschließen

- Schließen Sie den beiliegenden Ohrhörer an die Ohrhörer-Anschlussbuchse **PHONES** an.



Kassette einlegen

1. Fassen Sie an die Griffe auf beiden Seiten des Kassettenfachs und klappen das Kassettenfach nach vorne auf.

2. Legen Sie die Kassette mit dem sichtbaren Bandmaterial nach oben ein.

3. Drücken Sie das Kassettenfach bis zum Anschlag zu.

Kassette hören

Lautstärke regeln

- Um eine zu hohe Lautstärke zu vermeiden, drehen Sie zunächst die Lautstärke auf leise: Lautstärkeregler nach links drehen. Drehen Sie später den Lautstärkeregler nach rechts, um die Lautstärke nach Wunsch zu erhöhen.

Kassette abspielen

Wiedergabe starten

- Drücken Sie die Taste runter.

Alle Titel dieser Seite der Kassette werden nacheinander abgespielt. Am Bandende stoppt das Gerät automatisch.

Reset

Elektromagnetische Strahlungen im Umfeld des Gerätes können zu Funkstörungen führen. Wenn der Kassettenplayer sich nicht verbindet, führen Sie einen Reset durch:

1. Entfernen Sie sich mit dem Kassettenplayer aus dem Bereich der elektromagnetischen Strahlungen.

2. Schalten Sie die Bluetooth®-Verbindung am Kassettenplayer aus und wieder ein.

Achtung: Öffnen Sie das Kassettenfach nicht während der Wiedergabe.

Wiedergabe stoppen

- Drücken Sie die Taste runter.

Schneller Vorlauf

1. Stoppen Sie ggf. vorher die Wiedergabe, um das Kassettenband nicht zu beschädigen.

2. Drücken Sie die Taste runter.


Schneller Rücklauf

1. Stoppen Sie ggf. vorher die Wiedergabe, um das Kassettenband nicht zu beschädigen.

2. Drücken Sie die Taste runter.


Trageclip

Trageclip befestigen

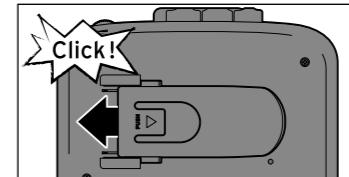

D Schieben Sie den Trageclip bis zum Anschlag in die Führungsschienen. Der Trageclip muss hörbar und spürbar einrasten.

Trageclip abnehmen

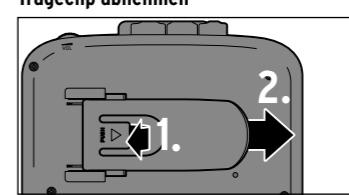

D Ziehen Sie die Lasche (PUSH) am Trageclip nach oben (1.) und ziehen Sie den Trageclip wie abgebildet zur Seite heraus (2.).

Verbindung über Bluetooth®

- Einige Geräte brauchen längere Zeit für den Verbindungsauflauf; dies ist keine Fehlfunktion.

- Beachten Sie in jedem Fall die Bedienungsanleitung Ihres Bluetooth®-Lautsprechers.

- In der Regel können Sie immer nur jeweils ein Gerät gleichzeitig mit dem Kassettenplayer verbinden.

- Per Bluetooth® können Sie den Kassettenplayer z.B. mit Bluetooth®-fähigen Lautsprechern verbinden.

- 1. Trennen bzw. entkoppeln Sie beim Bluetooth®-Lautsprecher ggf. bestehende Bluetooth®-Verbindungen zu mobilen Geräten o.Ä.

- 2. Schieben Sie den Bluetooth®-Schalter am Kassettenplayer in Position **ON**.

Die Kontroll-Leuchte am Kassettenplayer blinkt schnell.

- 3. Stellen Sie beim Kassettenplayer eine geringe Lautstärke ein.

- 4. Starten Sie den Pairing-Vorgang an Ihrem Bluetooth®-Lautsprecher.

- 5. Drücken Sie die Wiedergabe-Taste am Kassettenplayer runter.

Sobald die Bluetooth®-Verbindung hergestellt ist, blinkt die Kontroll-Leuchte am Kassettenplayer langsam und die Wiedergabe startet.

- ▷ Wenn Sie die Bluetooth®-Übertragung beenden wollen, schieben Sie den Bluetooth®-Schalter am Kassettenplayer in Position **OFF**.

- Wenn Sie die Geräte ausschalten, verbinden Sie sich nach dem Wiedereinschalten und Aktivieren von Bluetooth® automatisch mit dem zuletzt verbundenen Gerät.

Das Bluetooth®-Gerät muss in der Nähe und eingeschaltet sowie Bluetooth® aktiviert sein. Sobald das Bluetooth®-Gerät gefunden wurde, erlischt die Kontroll-Leuchte am Kassettenplayer.

Technische Daten

Modell: 602 018

Stromversorgung: im Lieferumfang:

Batterien: 2x LR6(AA)/1,5V

nicht im Lieferumfang:

Netzadapter: Eingang: 100-240 V ~ 50/60 Hz

Ausgang: 5 V USB



Portable Cassette Player with Bluetooth®

en Instructions for use
Tchibo GmbH D-22290 Hamburg · 108754HB66XX · 2020-07



Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep this manual for future reference. If you pass this product on to another person, remember to give them these instructions.

Intended use

The cassette player is designed for listening to cassette tapes using headphones or a speaker connected via Bluetooth®.

The cassette player is designed for private use and is not suitable for commercial purposes.

The cassette can be operated via a mains adapter (not included) or using both standard and rechargeable batteries. However, rechargeable batteries must be taken out of the device to be charged.

DANGER to children and people with restricted capabilities of operating appliances

- Keep the packaging material, USB connection cable and the headphone cable out of the reach of children. Risk of suffocation/strangulation!

- Children are not aware of the risks involved when electrical devices are handled incorrectly. Therefore, keep the product out of the reach of children.
- Keep the packaging material out of the reach of children. There is a risk of suffocation!

DANGER due to electricity during mains operation

- Only connect the product to the mains power supply in dry, indoor rooms using the USB connection cable provided and a suitable mains adapter.
- Only connect the article to a properly installed socket with a mains voltage that matches the voltage stipulated in the "Technical specifications" of the mains adapter.
- Never immerse the product in water or other liquids as there is otherwise a risk of electric shock. Protect it from drips and splashes of water too.
- Never place containers filled with liquids such as vases, etc. onto or in the immediate vicinity of the product. They could topple over and the liquid could impair the electrical safety of the device.
- Do not open or remove any part of the casing under any circumstances. There are live electrical parts inside the casing that could give you an electric shock if you touch them. Do not insert any objects into openings on the device. There is a danger of coming into contact with live components.
- Do not place the device in closed cupboards or shelves without adequate ventilation. The air circulation must not be impaired by newspapers, tablecloths, curtains etc. covering the ventilation slots. The device must have at least 5 cm free on all sides.

- Disconnect the mains adapter from the wall socket...
 - ... if malfunctions occur during use,
 - ... after use,
 - ... during thunderstorms and
 - ... before cleaning the device.

- Always pull on the mains adapter, not on the connection cable.
- The socket must be easily accessible so that you can disconnect the mains adapter quickly whenever necessary. Route the connection cable in such a way as to ensure that there is no danger of tripping over it.
- The connection cable must not be kinked or squeezed. Keep the connection cable away from hot surfaces and sharp edges.
- Do not use the product if it shows any signs of damage or if it has been dropped.
- Do not make any modifications to the product. Only have repairs to the device carried out by a specialist workshop.

During operation using batteries or rechargeable batteries:

- Warning! Standard and rechargeable batteries may explode ...
 - ... if inserted incorrectly. Therefore, ensure correct polarity (+/-) when inserting batteries.
 - ... if exposed to extremely high or low temperatures, or to low air pressure at high altitudes during use, storage or transportation. Only use the product under moderate climatic conditions.
 - ... if they are modified and/or deformed/heated/taken apart.
 - ... if they are dismantled, thrown into fire or short-circuited.

- Warning! There is a risk of explosion or release of explosive liquids or gases if batteries of the wrong type are inserted. Only use batteries of the same type or equivalent batteries (see "Technical specifications").

- If a battery leaks, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.
- Non-rechargeable batteries must not be charged in the device. This may cause them to explode.

- Protect both the product and its batteries from intense heat. Remove the batteries from the product when they are flat or if you do not intend to use the product for any length of time. This will avoid damage that may be caused by leakage.
- Always replace all batteries at the same time. Do not mix old and new batteries, or types and brands of batteries or those with different capacities.

- WARNING - risk of hearing damage**
 - Using the enclosed headphones at a high volume may lead to hearing loss. Set the volume to low before putting on the earphones! Your hearing can become damaged if exposed to high volumes suddenly or for long periods of time.

WARNING - risk of burns/fire

- Do not place any naked flames such as burning candles on or near the product. The product must be kept away from candles and other naked flames at all times to prevent the spread of fire.

CAUTION - material damage


- Do not use the device in close proximity to magnetic fields (e.g. from television sets or other speaker systems).
- Taking the device from a cold place to a warm place may cause condensation to form inside the device. In this case, leave the product switched off for a few hours.

- Protect the device from impacts, falls, dust, moisture, direct sunlight and extreme temperatures. Ensure there is sufficient space between the device and heat sources, such as stove tops or ovens, for example.

- The USB connection cable must not be kinked or squeezed.
- The connection terminals in the battery compartment must not be short circuited.
- Do not use abrasive or caustic products, or hard brushes, etc. for cleaning.

- i** The USB connection cable is only suitable for connecting the product to the mains power using a USB mains adapter, not for transferring data.

At a glance (features)

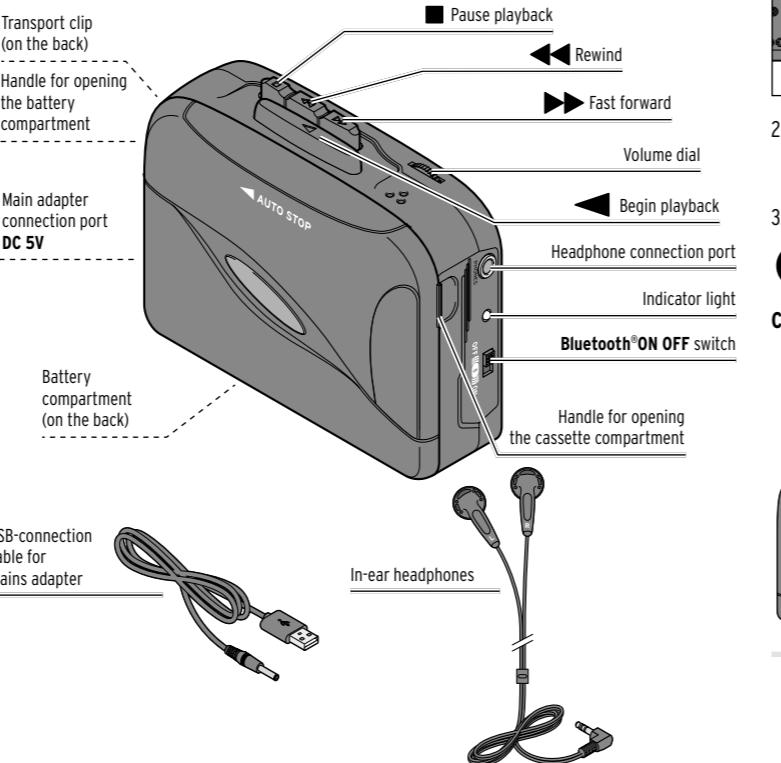

Also included (not pictured):
• 2 standard batteries

Prior to first use

You can operate the cassette player using a mains adapter, or with standard or rechargeable batteries.

Using the mains adapter

- DANGER -** risk of fatal electric shock
- Only connect the article to a properly installed socket with a mains voltage that matches the voltage stipulated in the "Technical specifications" of the mains adapter.
 - Always replace all batteries at the same time. Do not mix old and new batteries, or types and brands of batteries or those with different capacities.

- WARNING - risk of hearing damage**
- Using the enclosed headphones at a high volume may lead to hearing loss. Set the volume to low before putting on the earphones! Your hearing can become damaged if exposed to high volumes suddenly or for long periods of time.

- Insert the power plug of the USB connection cable into the DC 5V mains adapter connection port on the device and insert the USB plug into a suitable mains adapter.
- Insert the mains adapter into a wall socket.


Using battery power

You will need 2 batteries. The necessary technical specifications can be found under "Technical specifications".


WARNING - risk of injury

- Never attempt to charge non-rechargeable batteries.
- The device must not be connected to the mains during battery operation mode. Risk of explosion!

- To insert the batteries, disconnect the USB mains adapter from the wall socket, if necessary.

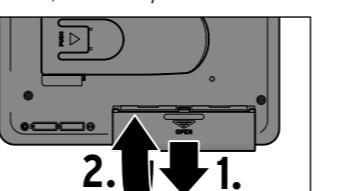

- Slide out the battery compartment lid a little and then open it up.

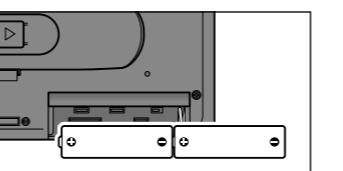

- Insert both batteries as shown in the battery compartment. Ensure the polarity is correct (+/-).
- Close the battery compartment lid.

- i** Battery operation time at moderate volume: approx. 6.5 hours.

Connecting headphones



Inserting a cassette tape

- Hold both sides of the cassette compartment using the handles and pull it out to open it.
- Place the cassette into the compartment with the visible ribbon facing upwards.
- Push the cassette compartment back as far as it will go to close it.

Listening to a cassette

Adjusting the volume

- To avoid playback at an excessively high volume, set the volume to a quiet setting first by turning the volume dial to the left. You can then adjust the volume by turning the dial to the right to increase the volume to the level you prefer.

Playing a cassette

Begin playback

- Press the button.

All tracks on this side of the cassette are played consecutively. The device stops playback automatically once it has reached the end of the tape.

Caution: do not open the cassette compartment during playback.

Pause playback

- Press the button.

Fast forward

- Pause playback first to prevent the cassette tape from becoming damaged.
- Press the button.

Rewind

- Pause playback first to prevent the cassette tape from becoming damaged.
- Press the button.

Bluetooth® connection

- i** For some devices, it will take longer to establish a connection; this is not a fault.
- Ensure you also observe the instructions provided for your Bluetooth® speaker.
 - Generally speaking, it is only possible to connect one device at a time with the cassette player.

You can connect the cassette player to Bluetooth®-enabled speakers via Bluetooth®.

- If required, first disconnect the Bluetooth® speaker from any existing Bluetooth® connections to mobile devices.
- Slide the Bluetooth® switch on the cassette player into the ON position.

The indicator light on the cassette player will flash quickly.

- Adjust the volume on the cassette player to a low setting.
- Begin the pairing process to your Bluetooth® speaker.
- Press the playback button on the cassette player.

- i** As soon as the Bluetooth® connection has been established, the indicator light on the cassette player flashes slowly and playback begins.

- If you wish to end playback via Bluetooth®, slide the Bluetooth® switch on the cassette player into the OFF position.

- i** If you switch off a device, it will automatically connect with the last device to which it was connected when it is switched on again and Bluetooth® is activated.

The Bluetooth® device must be nearby, switched on and its Bluetooth® function must be active. As soon as the Bluetooth® device is detected, the indicator light on the cassette player goes out.


Resetting

Electromagnetic interference around the device could lead to malfunctions. If the cassette player does not connect, carry out a reset:

- Take the cassette player to an area where there is less electromagnetic interference.
- Switch the Bluetooth® function on the cassette player off and on again.


Transport clip

Securing the transport clip

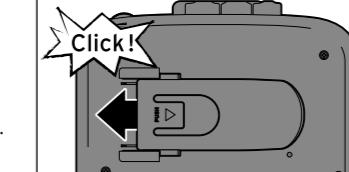

Slide the transport clip into the runners as far as it will go. You should hear and feel the transport clip click into place.

Removing the transport clip

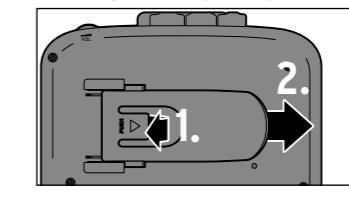

Pull the (PUSH) catch on the transport clip to open it (1.) and pull the transport clip sideways to remove it (2.).

Bluetooth®

Version: V5 / earlier versions (as of 1.1) are compatible but may not support all functions

Range: max. 6 m (in open spaces)

Frequency range: 2.402 GHz to 2.480 GHz

Max. transmission power (with the headphones provided): 2.5 mW

Device standards: HFP V1.6 / HSP V1.2 / A2DP V1.2 / AVRCP V1.4

Ambient temperature: +10 to +40°C

Made exclusively for: Tchibo GmbH, Überseeering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Tchibo GmbH is under license.

Declaration of Conformity

Tchibo GmbH hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU at the time of its being placed on the market.

You can find the complete declaration of conformity by entering the product number (602 018) at www.tchibo.de/anleitungen

Disposal

Devices marked with this symbol must not be disposed of along with household waste!

You are legally bound to dispose of old devices separately from household waste. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

Standard batteries and rechargeable batteries must not be disposed of along with household waste!

You are legally bound to dispose of flat batteries and rechargeable batteries at a local authority collection point or to return them to a battery retailer.

Technical specifications

Model: 602 018

Power supply:
included in delivery:

Batteries: 2x LR6(AA)/1.5V

not included:

Mains adapter:

Input: 100-240 V ~ 50/60 Hz

Output: 5 V USB

In-ear headphones:

Stereo; 3.5 mm Ø jack

Product number: 602 018