

LED light curtain

en Product information

For your safety

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

The product is only suitable for decoration and not for lighting whole rooms. The product is suitable for use both indoors and outdoors.


The product has been designed for private use and is not suitable for commercial purposes.

- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!
- Children are not aware of the risks involved in handling electrical appliances incorrectly. Therefore, never allow children to use electrical appliances unsupervised.
- The product is suitable to be used outdoors and complies with protection type IP44. This means that it is protected against dust and splashes of water, such as rain. However, you should protect it from heavy rain and streams of water. The product must never be operated under water. This would immediately result in a short circuit and present the risk of an electric shock.
- Only connect the product to a properly installed power socket with a voltage that complies with the technical specifications of the mains adapter. The LEDs cannot be dimmed. Never connect the product to dimmable power sockets.
- Do not use an extension cable.
- Always connect the connection cable to the mains adapter before you plug the adapter into the power socket. Always unplug the mains adapter from the power socket before disconnecting the connection cable from the mains adapter.
- Remove the mains adapter from the power socket ...
 - ... if malfunctions occur during use,
 - ... during thunderstorms,
 - ... before cleaning the product.
 Always pull on the mains adapter, not on the connection cable.
- The product must be used only with the supplied mains adapter.
- The connection cable must not be kinked or crushed. Keep the connection cable away from hot surfaces and sharp edges.
- The product must not be electrically connected to other fairy lights or anything similar.
- The on/off switch does not disconnect the mains adapter from the power supply. The power supply can only be interrupted by unplugging the mains adapter. The power socket used must be easily accessible so that you can quickly disconnect the mains adapter whenever necessary.
- Do not use the product if the product itself, the connection cable or the mains adapter shows any visible signs of damage.
- Do not make any modifications to the product. Do not attempt to replace the connection cable yourself. If the connection cable is damaged, dispose of the product in accordance with current regulations.
- Route the connection cable in such a way that it cannot be tripped over. The cable is not suitable/approved for burying underground.
- Do not position the connection cable in hollows or depressions where puddles might form.
- The built-in LEDs cannot and must not be replaced.
- Do not use any caustic, aggressive or abrasive products for cleaning.
- The product is suitable for outdoor use from a minimum temperature of approx. -10 °C. In temperatures colder than this, keep the product indoors as it may otherwise become damaged.
- The product is not made to withstand strong winds, storms, etc.! Take the product down in good time if there are strong winds or storms forecast.
- Do not switch the product on while it is still in its packaging and do not cover it when it is in use.

Product number: 665 926

Made exclusively for:
Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

Connecting / switching on/off / timer function



1. Insert the plug on the connection cable into the socket on the mains adapter and screw on the protective cap firmly.
2. Insert the mains adapter into a power socket.
3. Press the on/off switch on the mains adapter ...
 - ... **1x** to switch the product on permanently.
 - ... **2x** to switch the product on with the timer function. The LEDs in the fairy lights will flash twice and then light up continuously.
 - ... **3x** to switch the product off.

If the product is already lit up upon being connected to the power socket, the order of the switch functions will change to be:
press 1x = switch on timer function, press 2x = switch off, and so on.

Timer function: The LEDs are switched on and off in the following pattern:
ON: 6 hours - OFF: 18 hours - ON: 6 hours, and so on.

Cleaning

1. Remove the mains adapter from the power socket.
2. Wipe off the product with a dry, soft and lint-free cloth.

Technical specifications

Model:	665 926
Mains adapter	
Input:	220-240 V ~ 50/60 Hz
Output:	24 V  , 1 W (The  symbol stands for direct current)
Protection class:	II 
IP code:	IP44
Fairy lights	
Input:	24 V  70 LEDs, max. 0.7 W
Bulb:	LEDs (not replaceable)
Protection class:	III 
IP code:	IP44
Ambient temperature:	-10 °C to +40 °C
In the course of product improvement, we reserve the right to make technical and optical modifications to the product.	

Disposal

The product and its **packaging** have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the packaging at a recycling point which sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

Fastening the LED light curtain with suction pads

Benefits of suction pads

- easy to attach without damaging surfaces
- easy to remove without leaving a trace
- can be reused any time
- holds thanks to adhesive force and negative pressure



Why is my suction pad not sticking?

Suction pads naturally become loose over time! Do not hang any objects which are too heavy or fragile on the suction pads. Also do not place any fragile objects directly below the suction pads.

Tip for continuous use

▷ Press the suction pad on firmly again from time to time!

Preparation is key!

▷ Use on smooth surfaces:

e.g. glass and mirror surfaces, or enamel tiles

Our tip: Always stick a piece of smooth, transparent, self-adhesive film underneath. This helps the suction pad stick for much longer. We have included 8 sheets of adhesive film for you.



▷ Use on clean and dry surfaces:

free of dust, grease, silicone, limescale and other dirt.


Our tip: Clean the surface with glass cleaner, vinegar, citric acid or rubbing alcohol (isopropanol).

▷ The suction pad must be clean and dry:

free of any fatty production residue

Our tip: Place suction pads, including new ones, into warm water and washing-up liquid for a few minutes.

Attaching the suction pad

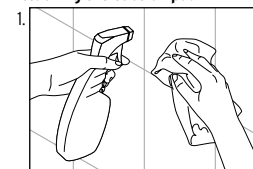


Thoroughly clean the underlying surface.

2. Pull the adhesive film off its backing material and attach it to the clean surface: apply the adhesive film by carefully smoothing it out from the middle outwards. **Wait 24 hours** for the adhesive film to achieve full adhesion!

3. **Thoroughly clean and dry** the suction pad and film.

4.  Position the suction pad on the film and **press it down firmly**.

5. Attach the rest of the suction pads as described.

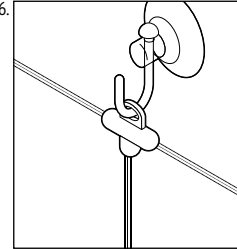6.  Hang the product on the suction pads as illustrated.

Has the suction pad fallen off?

- ▷ Clean the surface and the suction pad and press it on again. If necessary, use a new sheet of adhesive film. If the suction pad keeps falling off within a short period of time, either the surface is not smooth enough or the suction pad is too old.

Is the surface not smooth enough?

- ▷ **Our tip:** Spray a little hairspray onto the suction pad then press it onto the cleaned surface immediately. Leave it for at least 2 hours before loading anything onto it! (Only use it without the film.)



Is the suction pad too old?

All plastics harden over time. A common sign that this point has been reached is a discolouration in materials that were once transparent. You should then replace the suction pad as it has come to the end of its natural life span.

LED ışıklı perde

Ürün Bilgisi

Ürün numarası: 665 926
Tchibo için özel olarak üretilmiştir:
Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany,
www.tchibo.com.tr

Kendi güvenliğiniz için

Güvenlik uyarılarını dikkatle okuyun. Kaza sonucu ortaya çıkabilecek yaralanmaları ve hasarları önlemek için ürünü yalnızca bu kullanım kılavuzunda belirtildiği şekilde kullanın. Gerektiğinde tekrar okumak üzere bu kılavuzu saklayın. Bu ürün başkasına devredildiğinde, bu kılavuz da beraberinde verilmelidir.

Ürün dekorasyon için kullanılabılır ve oda aydınlatması için uygun değildir. Ürün iç ve dış mekanlarda kullanıma uygundur. Bu ürün özel kullanım için tasarlanmış olup ticari amaçlar için uygun değildir.

• Çocukları ambalaj malzemesinden uzak tutun. Aksi takdirde boğulma tehlikesi vardır!

• Çocuklar, elektrikli cihazların hatalı kullanılması sonucu oluşabilecek tehlikeleri fark edemez. Bu yüzden çocukların gözetimsiz olarak elektrikli cihazları kullanmalarına asla izin vermemeyin.

• Ürün dış mekanlarda kullanılabılır ve IP44 koruyucu sınıfına uygundur. Bu toz ve örn. yağmur gibi sıçrama sularına karşı koruma demektir. Ancak şiddetli yağmurdan ve akan sudan koruyun. Ürün kesinlikle su altında çalıştırılmamalıdır. Bu anında bir kısa devreye sebep olabilir ve elektrik çarpması riski söz konusudur.

• Ürünü sadece bağlantısı talimatlara uygun olarak yapılmış ve elektrik adaptörünün teknik bilgileri ile uyumlu bir şebeke gerilimine sahip bir prize takın. LED'ler kısılabılır özellikle değildir. Bu yüzden ürünü kısılarak söndürülebilir bir elektrik prize bağlamayın.

• Uzatma kablosu kullanmayın.

• Elektrik adaptörünü prize takmadan önce mutlaka bağlantı kablosunu elektrik adaptörüne takın. Bağlantı kablosunu elektrik adaptöründen çıkarmadan önce mutlaka elektrik adaptörünü prizden çekin.

• Elektrik adaptörünü prizden çekin, ...

... çalıştırma sırasında arızalar meydana gelirse,

... fırtınalı havalarda,

... ürünü temizlemeden önce.

Kabloyu değil, daima elektrik adaptörünü tutarak çekin.

• Bu ürün sadece ambalaj dahilindeki elektrik adaptörü ile çalıştırılmalıdır.

• Bağlantı kablosu bükülmemeli veya sıkışmamalıdır. Bağlantı kablosu sıcak yüzeylerden ve keskin kenarlardan uzak tutulmalıdır.

• Ürün başka ışık zincirleri vb. ile elektrikli olarak bağlanmamalıdır.

• Açma/kapama şalteri, elektrik adaptörünü akım beslemesinden ayırır. Elektrik akışı sadece elektrik adaptörünün prizden çıkarılması ile kesilir. Elektrik adaptörünü gerekli durumlarda hızlı çıkarabilmek için kolay ulaşabileceğiniz bir priz kullanın.

• Üründe, bağlantı kablosunda veya elektrik adaptöründe görünür hasarlar olması durumunda ürünü çalıştırmayın.

• Üründe herhangi bir değişiklik yapmayın. Bağlantı kablosunu kendiniz değiştirmeyin. Bağlantı kablosunda hasar olması durumunda ürünü geçerli belirlemelere uygun şekilde imha edin.

• Kabloyu takılmalara neden olmayacak şekilde yerleştirin.

Kablo, toprağa gömülmek için uygun/sertifikalı değildir.

• Bağlantı kablosunu su birikebilecek çukurlara veya derin yerlere yerleştirmeyin.

• Takılmış olan LED'ler değiştirilemez ve değiştirilmemelidir.


• Temizleme için sert kimyasallar, tahrış edici ya da aşındırıcı temizlik maddeleri kullanılmamalıdır.

• Ürün, yakl. -10 °C'ye kadar dış mekanlarda kullanım için uygundur. Daha soğuk havalarda bunu evde saklayın - aksi takdirde hasar görebilir.

• Kuvvetli rüzgar, fırtına vb. olaylara karşı ürün dayanıklı değildir! Kuvvetli rüzgar veya fırtına tehlikesi olması durumunda ürünü zamanında yerinden alın.

• Ürünü ambalajın içerisinde devreye almayın ve işletim sırasında üzerini örtmeyin.

Bağlama / Açma/Kapama / Zamanlayıcı fonksiyonu



1. Bağlantı kablosunun soketini elektrik adaptöründeki yuvasına takın ve koruyucu kapağı sıkıca kapatın.
2. Elektrik adaptörünü bir prize takın.
3. Elektrik adaptöründeki açma/kapama şalterine basın ...
... **1 defa**, ürünü sürekli çalıştırmak için.
... **2 defa**, ürünü zamanlayıcı fonksiyonu ile açmak için.
Işık zincirinin LED'leri iki kez yanıp söner ve ardından sürekli yanar.
... **3 defa**, ürünü kapatmak için.

Ürün prize takıldığı anda yanıyor sıra ilgili şekilde değişir:

1 defa basma = zamanlayıcı fonksiyonunu açma, 2 defa basma = kapatma ve bu şekilde devam eder.

Zamanlayıcı fonksiyonu: LED'ler aşağıdaki düzende açılır ve kapanır:
AÇIK: 6 saat - KAPALI: 18 saat - AÇIK: 6 saat vs.

Temizleme

1. Elektrik adaptörünü prizden çekin.
2. Ürünü kuru, yumuşak ve tüysüz bir bez ile silin.

Teknik bilgiler

Model:	665 926
Elektrik adaptörü	
Giriş:	220 -240 V ~ 50/60 Hz
Çıkış:	24 V 1 W (Bu sembol doğru akım göstergesidir)
Koruma sınıfı:	II
Koruma türü:	IP44
Işık zinciri	
Giriş:	24 V 70 adet LED, maks. 0,7 W
Ampul:	LED'ler (değiştirilemez)
Koruma sınıfı:	III
Koruma türü:	IP44
Ortam sıcaklığı:	-10 °C ila +40 °C
Ürün geliştirmeleri çerçevesinde üründe teknik ve dizayn değişikliği yapma hakkımız saklıdır.	

İmha etme

Ürün ve **ambalajı**, tekrar kullanılabilen değerli malzemelerden üretilmiştir. Tekrar kullanım sayesinde atıklar azalır ve çevre korunur. Ambalajı malzeme türüne göre imha edin. Bunun için bölgenizdeki kağıt, mukavva ve hafif ambalaj toplama merkezlerinin sunduğu imkanlardan faydalana bilirsiniz.



Bu sembolle işaretlenen **cihazlar** ev çöpi ile birlikte imha edilmemelidir! Yasalara göre atık cihazlarınızı, ev çöpünden ayrı atmak zorundasınız. Elektrikli cihazlar tehlikeli maddeler içerir. Bunların uygun olmayan şekilde depolanması ve imha edilmesi çevreye ve sağlığa zarar verebilmektedir. Atık cihazları ücretsiz olarak geri alan toplama merkezleri hakkında bilgi için bağlı bulunduğunuz belediyeye danışabilirsiniz.

LED ışıklı perdeyi vantuzla sabitleme

Vantuz avantajı

- alt tabakaya zarar vermeden kolay sabitleme
- kolay, kalıntı bırakmadan çıkarma
- her daim tekrar kullanılabılır
- Yapışma gücü ve alt basınç sayesinde tutma gücü

Vantuzum neden tutmuyor?

Vantuzların zamanla yerinden çıkması, onların niteliğinde vardır! Çok ağır ve kırılabilir nesneleri vantuzlara asmayın. Aynı zamanda altına kırılabilir bir şeyi de koymayın.

Sürekli kullanım için öneri

▷ Vantuzları zaman zaman tekrar sıkıca bastırın!

Doğru ön işlem önemlidir!

▷ Düz bir zemin:

örn. cam ve ayna yüzeyleri, sırlı fayanslar

Önerimiz: Her zaman altına bir parça düz, şeffaf kendi kendine yapışan folyoyu yapıştırın. Böylece vantuz daha uzun süre dayanır. Biz sizin için 8 uygun kendinden yapışkanlı folyo pedlerini ekledik.

▷ Temiz ve kuru bir zemin:

toz, yağ, silikon, kireç ve diğer kirlenmelerden arındırılmış


Önerimiz: Zemini bir cam temizleyicisi, sirke, limon asidi veya evlerde kullanılan alkol (izopropanol).

▷ Temiz ve kuru bir vantuz:

yağ içeren üretim kalıntılarından arındırılmış


Önerimiz: Yeni vantuzları da birkaç dakikalığına evinizde bulunan deterjan ile hazırlanmış sıcak suya koyun.

Vantuzu sabitleme

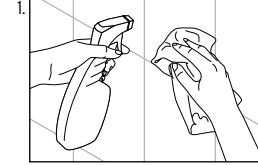


Zemini iyice temizleyin.

2. Folyoyu taşıyıcı malzemeden çıkarın ve temizlenmiş zemine yapıştırın: Ortadan dışarı doğru iyice bastırarak elinizle üzerinden ovalayın. 24 saat bekleyin, folyonun yapışma gücü ancak sağlanır!
3. Vantuzu ve folyoyu **ayrıntılı olarak temizleyin ve kurutun.**

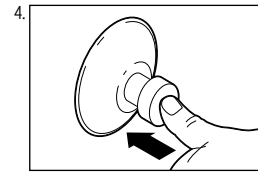

Vantuzu folyo üzerine yerleştirin ve sıkıca bastırın.

5. Geriye kalan vantuzları tarif edildiği gibi sabitleyin.

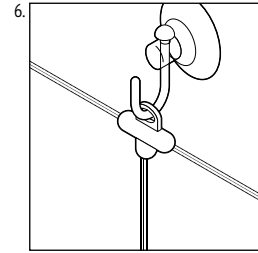

Ürünü resimde gösterildiği gibi vantuz halkasına asın.

Vantuz yerinden düştü mü?

▷ Zemini ve vantuzu temizleyin ve vantuzu tekrar bastırın.

Gerektiğinde yeni bir folyo kullanın.

Sürekli olarak düşüyorsa ya zemin yeteri kadar düz değildir ya da vantuz çok eskidir.

Zemin yeteri kadar düz değil mi?

▷ **Önerimiz:** Vantuzu biraz saç spreyi sıkın, ardından vantuzu hemen temizlenmiş olan yüzeye bastırın. En erken 2 saat sonra ağırlık takın! (Sadece folyosuz kullanın).

Vantuz çok mu eski?

Zamanla tüm plastikler sertleşir. Bu çoğunlukla alışıldığı üzere şeffaf bir malzemenin renk atmasından tanınır. Bu durumda, doğal yaşam süresinin sonuna ulaştığından vantuz değiştirilmelidir.

